



# Keyless Locking - Quick Reference Guide

GC/GC2	VR2	R-NET	Q-LOGIC 3 EX	Q-LOGIC 3e	Q-LOGIC NES	NE+

## INDICATION:

<p>Battery Indicator LEDs flashing sequence</p>	<p>Profile LEDs scroll left to right</p>	<p>Profile LEDs scroll left to right</p>	<p><b>System Lock</b> LCD Display states System Lock</p>	<p><b>System Lock</b> LCD Display states System Lock</p>	<p>Battery Indicator LEDs (yellow and green) shall blink alternatively</p>	<p>Battery Indicator LEDs The battery condition meter and key will be on the LCD screen</p>
---	--	--	--	--	--	---

## TO UNLOCK:

Power on, hold joystick forward until it beeps (3-5 secs.). Then pull joystick back until it beeps (3-5 secs). System is unlocked.	Power on, hold joystick forward until it beeps (3-5 secs.). Then pull joystick back until it beeps (3-5 secs). System is unlocked.	Power on, hold joystick forward until it beeps (3-5 secs.). Then pull joystick back until it beeps (3-5 secs). System is unlocked.	Powered on, hold joystick forward until it beeps (7-10 secs). Then pull joystick back until it beeps (7-10 secs). System is now unlocked.	Power on, hold joystick forward until it beeps (7-10 secs.). Then pull joystick back until it beeps (7-10 secs). System is unlocked.	Power on, hold joystick forward until it beeps (7-10 secs.). Then pull joystick back until it beeps (7-10 secs). System is unlocked.	Power on, hold joystick forward until it beeps (7-10 secs.). Then pull joystick back until it beeps (7-10 secs). System is unlocked.
--	--	--	---	--	--	--

## TO LOCK:

Power on and keep pressing On/Off Key until it beeps, then release. Push joystick forward until it beeps (3-5 secs), then pull joystick back until it beeps (3-5 secs). System is locked.	Power on and keep pressing On/Off Key until it beeps, then release. Push joystick forward until it beeps (3-5 secs), then pull joystick back until it beeps (3-5 secs). System is locked.	Power on and keep pressing On/Off Key until it beeps, then release. Push joystick forward until it beeps (3-5 secs), then pull joystick back until it beeps (3-5 secs). System is locked.	Power on, push the Mode Select Lever forward until power goes off. Use an external switch or set profile to AUX and lock will appear in AUX menu (must be programmed for lock).	Power on, push and hold the Mode Button until power goes off (7-10 secs). The system is now locked.	Power on, press and hold Mode Keys until power goes off (7-10 secs). The system is now locked.	Power on, press and hold both profile keys until power goes off (7-10 secs). The system is now locked.
---	---	---	---	---	--	--